



# INSTALLATION GUIDE

## 21-23/RAM TRX REAR SHOCK GUARDS AC6202001NA



### TOOLS REQUIRED

(Wrench) 9/16, 3/4, 13/16  
(Socket) 9/16, 3/4, 13/16



### TIME REQUIRED

- 1 hour for OEM Removal/guard Install



### SKILL LEVEL

-Easy/Intermediate



### INCLUDED IN KIT

- 2- 3/8-16 x 1" Hex Head Bolt
- 4- 3/8 Flat Washer
- 2- 3/8-16" Nylon Lock Nut
- 2- 1/2-20 x 4 1/2" Hex Head Bolt
- 4- 1/2" Flat Washer
- 2- 1/2-20 Metal Lock Nut

## ⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

**Read and understand all instructions,** warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service (480) 671-0820

Addictive desert designs is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these

components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

**\*ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS\***



## HARDWARE/PARTS

**A.**



3/8-16 X 1" HEX HEAD BOLT GRADE 8

QTY: 2

**A1.**



3/8" WASHER

QTY: 4


**A2.**



3/8-16 NYLON LOCK NUT

QTY: 2

**B.**

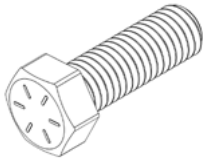

1/2-20 X 4 1/2 HEX HEAD BOLT

QTY: 2


**B1.**



1/2 WASHER

QTY: 4

**B2.**

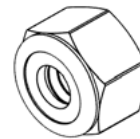

1/2-20 METAL LOCK NUT

QTY: 2

Reference this page throughout the install



# INSTALLATION **GUIDE**

## REAR SHOCK GUARDS 21-23/RAM TRX

## REMOVAL

### STEP 1

Before starting, support the axle by using a jack. Next using a (13/16 socket) remove the shock bolt highlighted below.







# INSTALLATION GUIDE

## REAR SHOCK GUARDS 21-23/RAM TRX

## INSTALL

### □ STEP 3

Install the provided **(B, B1, B2)** 1/2" hardware using a (3/4" wrench and socket) as shown below.





# INSTALLATION GUIDE

## REAR SHOCK GUARDS 21-23/RAM TRX

## FINAL

### □ STEP 4

Stand back and enjoy your new ADD Rear Shock Guards.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS  
[WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS](http://WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS)

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,  
PLEASE CALL 480-671-0820 OR  
EMAIL [INFO@ADDICTIVEDESERTDESIGNS.COM](mailto:INFO@ADDICTIVEDESERTDESIGNS.COM)